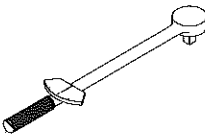



# MIRRA™ CHAIR ASSEMBLY INSTRUCTIONS


## TOOLS REQUIRED


  
13 mm SOCKET

  
TORQUE WRENCH

## PARTS INCLUDED

  
HARDWARE PACK

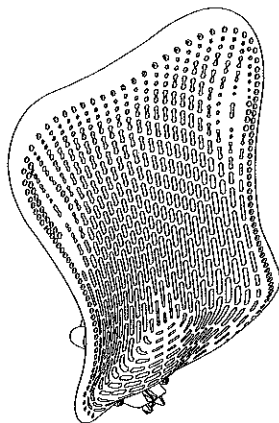  
CHAIR BACK ASSEMBLY

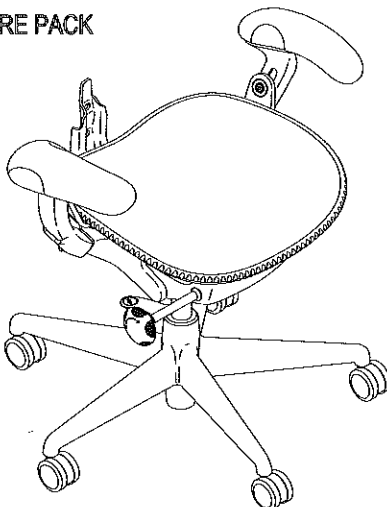
  
CHAIR BASE ASSEMBLY

## PROCEDURE:

1

### NOTICE



Remove all chair components from packaging and inspect for any damage which may have occurred during shipping, prior to assembling chair.

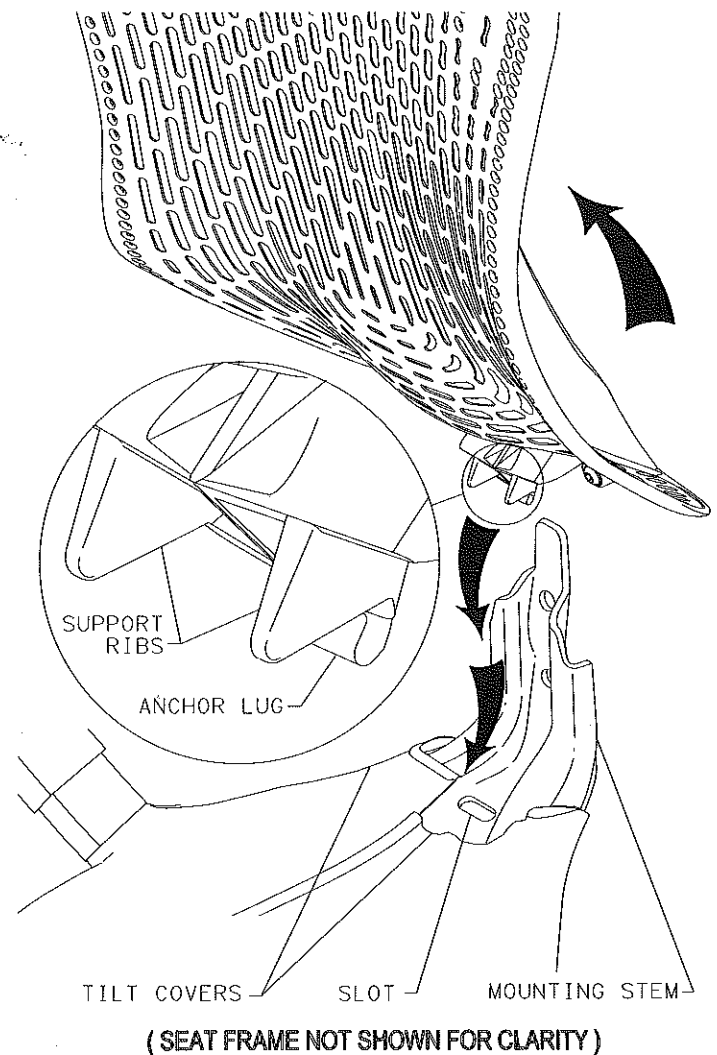

NOTE: A clean location with padded or carpeted surface for assembly is recommended.

1. While holding chair back vertically, rotate top forward slightly. Slide lower end of back assembly onto mounting stem while inserting support ribs under tilt covers.
2. Chair back assembly will nest properly on mounting stem when anchor lug engages slot in base of mounting stem.

1B0Z8S REV F

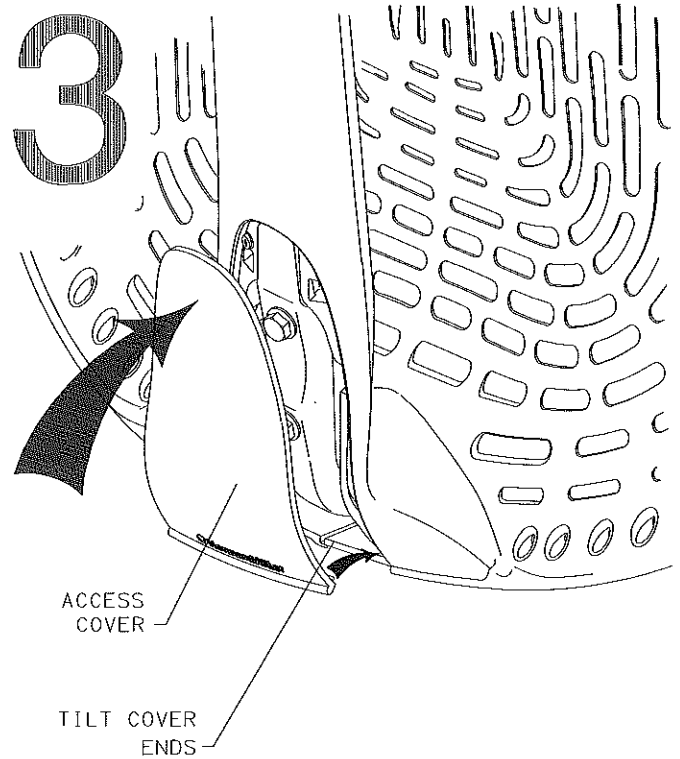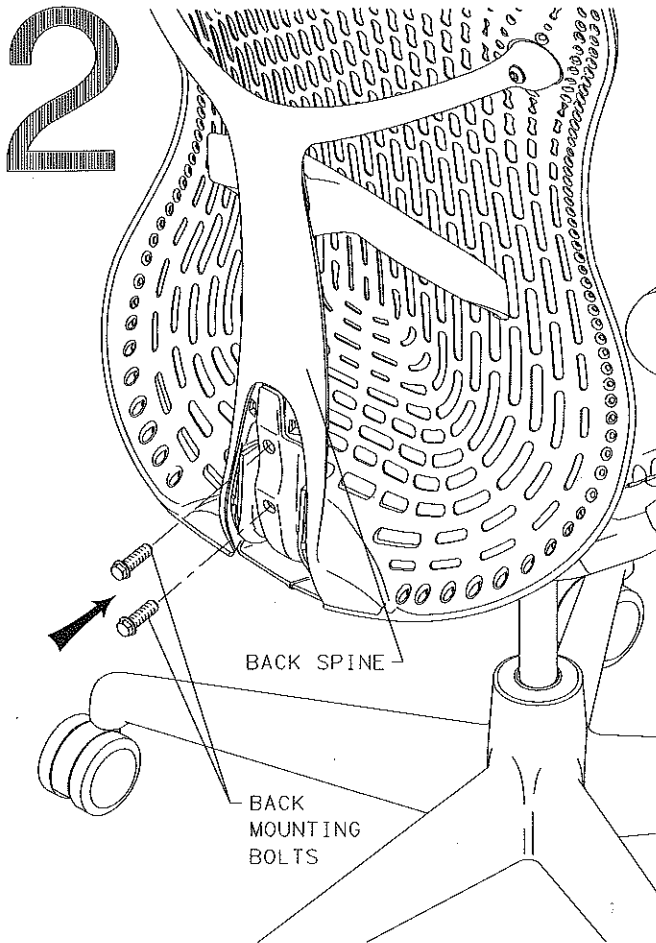

1. Engage lower lip, on back surface of access cover, onto tilt cover ends.
2. Rotate access cover up and snap cover into place, by hand, until flush with surface of back spine.

**! WARNING**

Torque back mounting bolts to value noted. Assembly of product, other than specified (e.g. excessive torque), can result in product damage and/or personal injury.

1. By hand, install (2) back mounting bolts, included in hardware pack, through mounting stem and into back spine, until bolts are finger tight.
2. Using 13 mm socket and torque wrench, torque back mounting bolts to 168 inch-lbs (19 N-m).